



## LENSLOK INSTRUCTIONS FOR USE.

This quality program is protected by **LENSLOK**. Please read these instructions carefully before proceeding.

- 1) Once the program has loaded, press '**ENTER**', the screen will change and you will see three vertical lines appear on the screen - don't worry about anything else on the screen at this time.
- 2) Place the **UNFOLDED LENSLOK** holder lengthways on the screen, between the two outermost vertical lines. Using the cursor keys '5' and '8', adjust the two outermost vertical lines until they are the same width as the **LENSLOK** holder.
- 3) Fold the **LENSLOK** holder back, (as indicated on the holder) place the holder on the screen, (with '**TOP**' on the holder, uppermost) and align the centre line of the lens with the vertical centre line on the screen. Now, by closing one eye and looking directly at the screen through the lens, you will see the letters 'O' and 'K' appear.
- 4) If you are unable to see the letters clearly, use the adjustment keys to 'fine tune' the display until 'O' and 'K' are seen more clearly.
- 5) When you are satisfied that you can see the 'OK' message properly and whilst keeping the holder in the same position, press '**ENTER**'.  
Two more characters will be displayed. Type these in and the protected program will run as normal.
- 6) If, however you make a mistake, two more characters will be generated and you should type these two new characters in.  
You are allowed three attempts before the computer will reset, making it necessary to re-load the program.

**LENSLOK IS A TRADEMARK OF A.S.A.P. DEVELOPMENTS.**





### LENSLOK - INSTRUCTIONS FOR USE


This quality program is protected by **LENSLOK**. Please read these instructions carefully before proceeding.

- 1) Once the program has loaded, the screen will change and you will see three vertical lines appear on the screen - don't worry about anything else on the screen at this time.
- 2) Place the **UNFOLDED LENSLOK** holder lengthways on the screen, with the longside horizontal, between the two outermost vertical lines. Using the cursor keys '5' and '8', adjust the two outermost vertical lines until they are approximately 5mm either side of the **LENSLOK** holder.

- 3) Fold the **LENSLOK** holder so that it resembles a small 'table' with 'THIS SIDE OUT' written on its uppermost side. Stand the 'feet' of the holder on the television screen (see photograph 1), with the centre line of the lens in alignment with the vertical centre line on the screen. Now, by closing one eye and looking directly at the screen (sway your head slightly from side-to-side if necessary), you will see the letters 'O' and 'K' appear through the lens.



- 4) If you are unable to see the letters clearly, use the '5' and '8' keys to 'fine tune' the display until 'O' and 'K' are seen more clearly. The 'O' will almost definitely be clear, but the 'K' may take some adjusting before it is seen clearly.

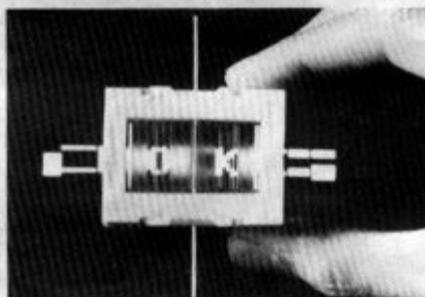

- 5) When you are satisfied that you can see the 'OK' message properly and whilst keeping the holder in the same position, press '**ENTER**'. Two more characters (letters or numbers) will be displayed. Type these in and the program will run as normal.
- 6) If, however you make a mistake, two more characters will be generated and you should type these two new characters in. You are allowed three attempts before the computer will return to the initial size adjustment screen, allowing you to obtain the correct size (instruction 2) you are then allowed 3 more attempts before the computer will reset making it necessary to reload the program.

